

B5 SPARE PART LIST

S/N	NAME	SPECIFICATION	QUANTITY	S/N	NAME	SPECIFICATION	QUANTITY
1	Shaft circlip	10	1	51	Elastic washer	5	7
2	planetary gear	B5LA-02-13	1	52	gear box cover	B5LA-01-04	1
3	washer of planetary gear	B5LA-02-14	1	53	frame	B5LA-01-03	1
4	deep groove ball bearing	61901	2	54	Inner ring gear	B5LA-02-16	1
5	Planetary shaft	B5LA-02-12	1	55	Hexagon socket head cap screw	M5X12	3
6	flat key	3x12	1	56	Oil collecting ring	B5LA-02-17	1
7	Hexagon socket set screw	M6X8	3	57	Locking handle		1
8	protective cover	B5LA-01-13-00	1	58	Locking shaft	B5LA-03-01-02	1
9	deep groove ball bearing	608	1	59	Limit torsion spring mount	B5LA-03-04-00	1
10	Shaft circlip	12	1	60	tapping screw	5.5X32	2
11	gear of output shaft	B5LA-02-10	1	61	Limit torsional spring	B5LA-03-03	1
12	Output shaft	B5LA-02-09	1	62	cross pan head screw	M5X14	2
13	deep groove ball bearing	6001	1	63	Travel switch base	B5LA-03-08	1
14	oil seal	12x25x7	1	64	nut	M5	2
15	flat key	3x10	1	65	cross pan head screw	M3X20	2
16	flat key	3x16	1	66	nut	M3	4
17	circlip for hole	22	1	67	Hexagon socket head cap screw	M5X20	4
18	deep groove ball bearing	608	1	68	Elastic washer	5	4
19	Bridge shaft	B5LA-02-07	1	69	flat key	5	4
20	flat key	3X10	1	70	motor washer	B5LA-02-02	4
21	gear of bridge shaft	B5LA-02-08	1	71	Cross countersunk head screw	M6X35	1
22	Shaft circlip	12	1	72	Limit curved plate	B5LA-03-02	1
23	deep groove ball bearing	608	1	73	Cross countersunk head screw	M8X16	2
24	hexagon(al) nut	M8	1	74	torsional spring of frame	B5LA-03-06	1
25	flat key	8	1	75	pin of frame	B5LA-03-05	1
26	big pulley	B5LA-02-04	1	76	Limit screw of frame	B5LA-03-07	1
27	circlip for hole	26	1	77	shock pad	B5LA-01-05-03	2
28	deep groove ball bearing	6000	1	78	base	B5LA-01-05-01	1
29	oil seal	12X26X7	1	79	potential device		1
30	flat key	3X10	1	80	Power cord sleeve		1
31	input shaft	B5LA-02-05	1	81	solenoid switch		1
32	gear of input shaft	B5LA-02-06	1	82	Electrical box (including circuit board)		1
33	Shaft circlip	10	1	83	baseplate	B5LA-01-07	1
34	deep groove ball bearing	608	1	84	rubber feet	B5L-01-20	4
35	split washer	8	1	85	Hexagon socket head cap screw	M5X20	4
36	Retaining ring of small pulley	B5LA-02-03-01	1	86	cross pan head screw	m5x24	2
37	small pulley	B5LA-02-03	1	87	Transposition	B5LA-02-11	1
38	flat key	3x10	1	88	flat key	8	1
39	synchronous belt 120XL-037		1	89	Cap nut	M8	1
40	motor		1	90	Travel switch		1
41	bowl	B5LA-01-09	1				
42	bowl pad	B5LA-01-08	1				
43	beater		1				
44	hook		1				
45	whip		1				
46	Flat cover	B5LA-01-01-01	1				
47	surrounding frame	B5LA-01-02	1				
48	Sinking hole decorative cover	B7LB-01-17	2				
49	Hexagon socket head cap screw	M5X16	7				
50	flat key	5	7				

